# SUPERMICR • X10DRD-ITP/INTP/LTP QUICK REFERENCE GUIDE REV. 1.0b

### **CONTACT INFORMATION**


- Website: www.supermicro.com

- DRIVERS/IMAGES/USER'S MANUAL FROM THE LINKS BELOW: General Information: marketing@supermicro.com
  Manuals: http://www.supermicro.com/support/manuals/
  Tech Support: support@supermicro.com
  Drivers & Utilities: http://www.supermicro.com/wftp
  One (1) I/O shield dua
  Manuals: http://www.supermicro.com/about/policies/safety\_information.cfm
  (MCP-260-00087-0N)

### FOR YOUR SYSTEM TO WORK PROPERLY, PLEASE DOWNLOAD APPROPRIATE PACKAGE CONTENTS

- One (1) Supermicro Motherboard
- Four (4) SATA Cables (CBL-0044L)




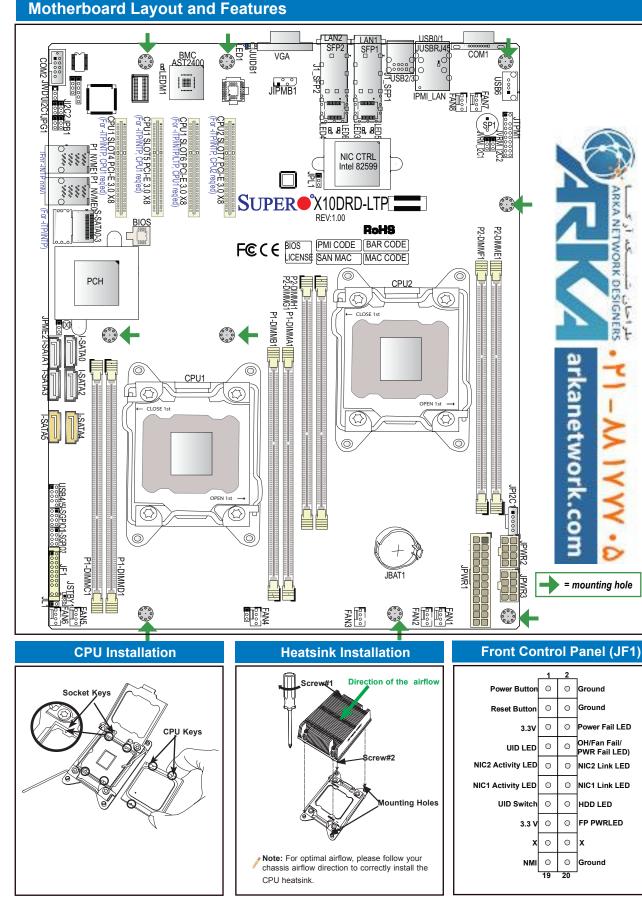

Jumpers and Connectors						
Jumpers						
Jumper	Descri	ption	Default Setting			
JBT1	Clear C	CMOS	See Chapter 2			
JI <sup>2</sup> C1/JI <sup>2</sup> C2	SMB to	PCI-E Slots	Pins 2-3 (Disabled)			
JPB1	BMC E	nable	Pins 1-2 (Enabled)			
JPG1	VGA E	nable	Pins 1-2 (Enabled)			
JPL1	10G_S	PF/LAN 1/2 Enable	Pins 1-2 (Enabled)			
JPME2	Manufa	acture (ME) Mode Select	Pins 1-2 (Normal)			
JWD1	Watch	Dog Timer Enable	Pins 1-2 (Reset)			
Connectors						
Connectors		Description				
JBAT1 (Batte	ery)	Onboard CMOS battery				
COM1/COM		Backplane COM Port1/Front accessible COM2 header				
FAN 1- 8		CPU/system fan headers (FAN1-FAN8)				
IPMI_LAN		IPMI_dedicated LAN support by the Aspeed controller				
JF1		Front control panel header				
JL1		Chassis intrusion header				
JPI <sup>2</sup> C1		Power supply SMBbus I <sup>2</sup> C head	er			
JPWR1		24-pin ATX main power connector				
JPWR2/JPW	/R3	12V 8-pin power connectors				
JSTBY1		Standby power connector				
JTPM1		TPM (Trusted Platform Module)/I	Port 80 header			
P1-NVME0/	1	NVM Express PCI-E 3.0 x4 p X10DRD-iNTP only)	ports supported by CPU1 (for			
I-SATA 0-5		SATA 3.0 connectors supported SATA4/I-SATA5: can be used as es-on-Module] with built-in powe	Supermicro SuperDOMs [Devic-			
I-SGPIO1/2		Seria_Link General Purpose I/O headers 1/2 for SATA ports (I- SGPIO1 for I-SATA0-3, I-SGPIO2 for I-SATA4/5)				
S-SATA0-3		SATA 3.0 connections 0-3 supported by Intel® SCU (for X10DRD-iTP/iNTP only)				
SFP+/LAN1		10G_SFP+ (Small-form Factor Pluggable Transceiver)/(10GbE) LAN Port 1 (J1_SFP1)				
SFP+/LAN2		10G_SFP+ (Small-form Factor Pluggable Transceiver)/ (10GbE) LAN Port 2 (J1_SFP2)				
(CPU1)Slot4		PCI-Express 3.0 x8 slot from CP	U1 (for X10DRD-iTP/iNTP)			
(CPU1)Slot5		PCI-Express 3.0 x8 slot from CP	U1 (for X10DRD-iTP/iNTP)			
(CPU1)Slot6		PCI-Express 3.0 x8 slot from CP	U1 (for X10DRD-iTP/iNTP/LTP)			
(CPU2)Slot7		PCI-Express 3.0 x8 slot from X10DRD-iTP/iNTP)	CPU2 (CPU2 is required) (for			
SP1		Internal speaker/buzzer				
UID-SW (JUIDB1)		UID (Unit Identification) switch				
(BP) USB 0/1 (2.0)		Backpanel USB 2.0 ports 0/1				
(BP) USB 2/3 (2.0)		Front accessible USB 2.0 connections (USB 2/3) header				
(BP) USB 4/5 (2.0)		Backpanel USB 2.0 ports 4/5				
(FP) USB 6 (2.0)		Front accessible Type A 2.0 connector (USB6)				
VGA		Backpanel VGA port				
/ Note: Refer to Chapter 1 of the user manual for detailed information on jumpers, connectors, and LED						

Note: Refer to Chapter 1 of the user manual for detailed information on jumpers. connectors. and LED indicators.

Motherboard

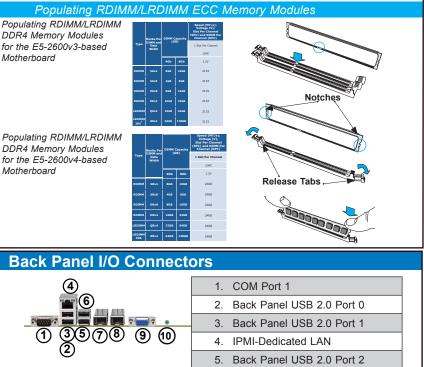

LED Indicators					
LED	Description	State	Status		
LED1	Rear UID LED	Blue: On	Unit Identified		
LED3	SFP+/LAN1 Activity LED	Green: Blinking	SFP+/LAN1 Active		
LED4	SFP+/LAN1 Heartbeat LED	Green: Blinking	SFP+/LAN1 Normal		
LED5	SFP+/LAN2 Activity LED	Green: Blinking	SFP+/LAN2 Active		
LED6	SFP+/LAN1 Heartbeat LED	Green: Blinking	SFP+/LAN2 Normal		
LEDM1	BMC Heartbeat LED	Green: Blinking	BMC Normal		

Note: Graphics shown in this quick reference guide are for illustration only. Your components may or may not look exactly the same as the drawings shown in this guide.

- One (1) I/O shield (MCP-260-00042-0N)
- One (1) Quick Reference Guide (MNL-1681-QRG)
- One (1) I/O shield dual-port SFP bracket One (1) iPASS to 4-SATA cable (CBL-0097L-03) (for X10DRD-iTP/iNTP)

### **CPU Support**

Dual Intel® E5-2600v3/v4 Series processors (Socket R3-LGA 2011); each processor supports dual full-width Intel QuickPath Interconnect (QPI) links (of up to 9.6 GT/s one direction per QPI)

/Note: Please install both CPUs for full access to the PCI-E slots, DIMM slots, and onboard controllers. Refer to the block diagram on page 1-10 in the manual to determine which slots or devices may be affected. Please populate CPU socket 1 first.

## Memory Support

This motherboard supports up to 1024 GB of Load Reduced (LRDIMM) or 256 GB or Registered (RDIMM) DDR4 (288-pin) ECC 2400 MHz (max.) modules in eight slots Memory speed support depends on the CPUs installed in the motherboard. For the latest memory updates, please refer to our website at http://www.supermicro.com products/motherboard.

	3. Back Panel USB 2.0 Port 1
) (9) (1)	4. IPMI-Dedicated LAN
	5. Back Panel USB 2.0 Port 2
	6. Back Panel USB 2.0 Port 3
	7. 10G_SPF + 10GbE LAN Port 1
	8. 10G_SPF + 10GbE LAN Port 2
	9. Back Panel VGA (Blue)
	10. UID Button/UID LED

/Note: Refer to Chapter 2 of the user manual for detailed information on memory support and CPU/ motherboard installation instructions.